

Blind not tilting correctly?


One of the most common reasons why a venetian blind can stop tilting is that the ladder cord may have slipped from the drum inside the head box.

Please follow these steps to check.

Step1. Please remove the blind from its brackets.

Step2. Looking down inside the head, box please check that the ladder cords are correctly in place.

You will need to check **every drum** and **ladder cord**. (Please see illustration below)

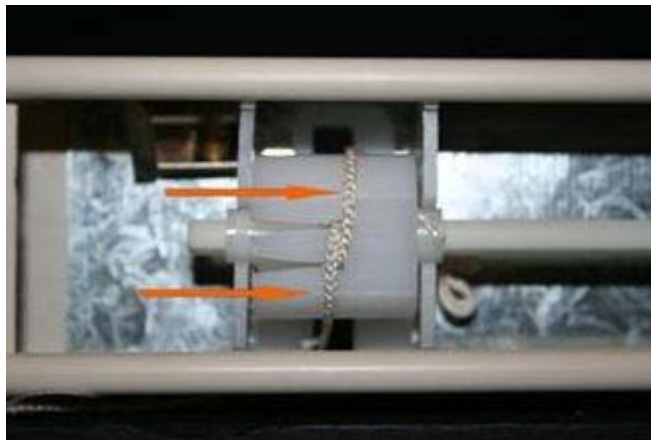

If by any chance one of these ladder cords have slipped off the drum this will cause the blind to stop tilting. You will need to simply place the cord back in the correct position. Please ensure the ends are clicked in properly.

Disclaimer: Cheapa-Blinds recommend the use of professional repairers when repairing and maintenance is required for your window furnishing products. The above information is provided as a guide only for those wishing to undertake the maintenance of their window furnishings themselves in their own home. Cheapa-Blinds will not accept liability or claims against our company in the event that a person or persons experience damage or injury to themselves, their window furnishings or personal property as a result of having used the above information to maintain their window furnishings. The above information is provided as a Guide only as a result of many requests from customers wishing to maintain their window furnishings in their own home. If you are unsure, we recommend the use of a professional window furnishing maintenance service.