

Roller Shade / Roller Blind Installation Instructions

The mounting of a roller shade or roller blind with a chain-operated brake mechanism is very easy. You will require a battery drill/screwdriver. Screws and fittings are supplied. The brackets should be mounted into a timber window frame. If mounting into a dry wall be sure to use a wall anchor.

Attaching your brackets pt.1

The brackets can be placed 2 different ways:

Bracket Placement

Inside/Reveal mount



Bracket Placement

Outside/Face Mount



The bracket pictured to the right goes into the clutch end of the roller shade.



The bracket pictured to the right goes into the other end of the roller shade.



Inside Mount: The cord guide mounts to the side of the window frame.
Outside Mount: The cord guide mounts to the frame or wall.
(Note: Do not apply tension to the loop control)



Attaching your brackets pt.2

Installing Brackets pt.1

You will need to mark where you require the roller to be placed - inside or outside the window frame.
The bracket must be placed into the corner edge of the window frame.
Commonly you can set this bracket around 1cm in from the outer edge of the window frame.



Installing Brackets pt.2

Holding in place screw in the first bracket.



Installing Brackets pt.3

Holding in place screw in the second bracket.



Attaching your blind to the brackets

Installing the Blind pt.1

Place the roller blind into the main drive bracket.



Installing the Blind pt.1


Place the other end into the bracket.



Automatic Release

If you need to remove the blind from the brackets:

The plastic spindle at the end of the roller blind is able to be turned to release the blind from the bracket.

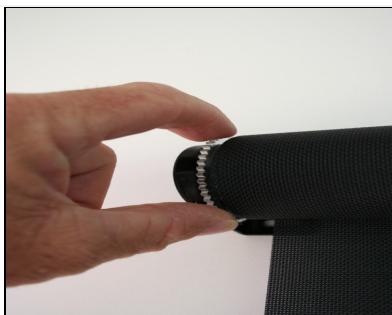

Copyright © www.cheapa-blinds.com.au